


Audi A8

Wiring Diagram

No. 49 / 3


Control Module for Parking Aid, Front Parking Aid Sensor, Warning Buzzer for Parking

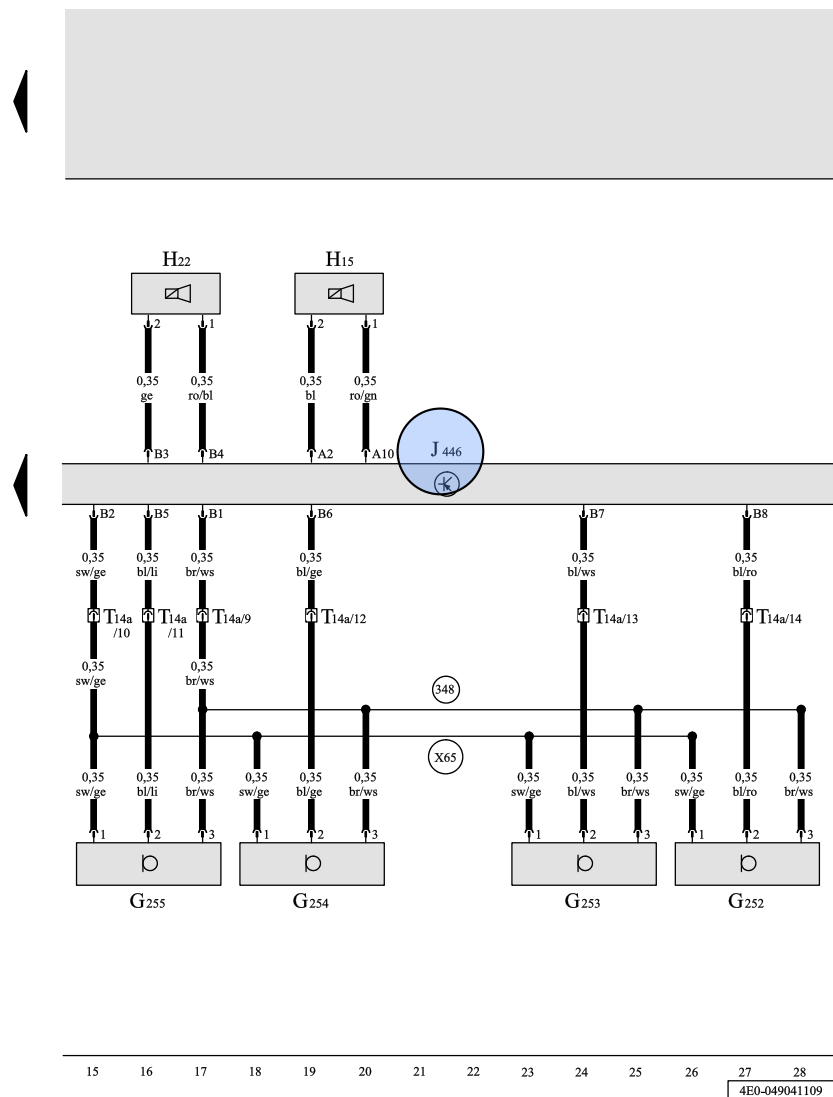




- G252 - Right front parking aid sensor
- G253 - Right front center parking aid sensor
- G254 - Left front center parking aid sensor
- G255 - Left front parking aid sensor
- H15 - Warning buzzer for parking
- H22 - Front parking aid warning buzzer
- J446** - Control module for parking aid
- T14a - 14-Pin Connector, black, in engine compartment left front
- 348 - Ground Connection (Parking Aid), in front bumper wiring harness
- X65 - Parking Aid Connection (in front bumper wiring harness)


Audi A8

Wiring Diagram

No. 49 / 4

Control Module for Parking Aid, Parking Sensor Rear

- G203 - Parking sensor, rear left 
- G204 - Parking sensor, rear left, center 
- G205 - Parking sensor, rear right, center 
- G206 - Parking sensor, rear right 
- J446 - Control module for parking aid 
- T17o - 17-Pin Connector, black, in luggage compartment

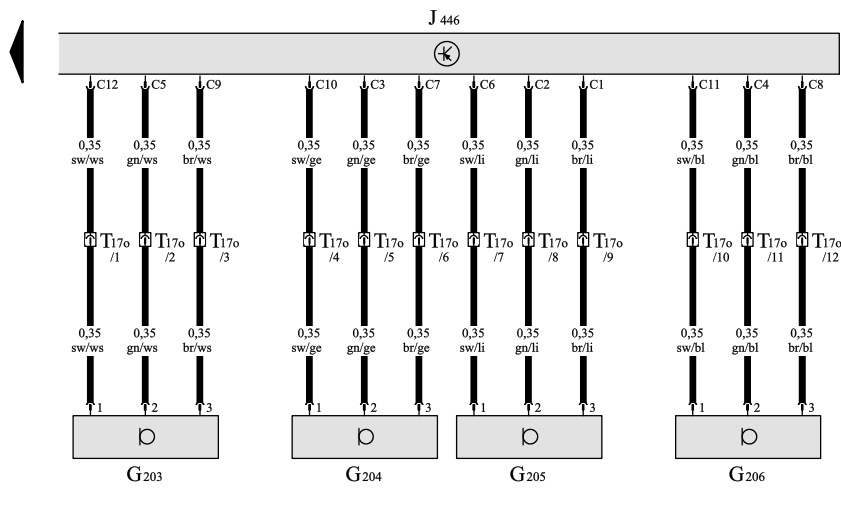

29 30 31 32 33 34 35 36 37 38 39 40 41 42
4E0-049051109